



Original	Rechange	Original	Rechange
Source	AV / Input / RDS	Teletext	Text / Goto
Sync Menu	Setup / OPT /	Red	Red / Netflix / Search
Power	Power	Green	Green / APP / Repeat
Digital/Analog	Display / Media	Yellow	Yellow / YouTube / Repeat
Tv/Radio	TV/Radio /	Blue	Blue / Prime Video / Random
Football	Eject / Surround	[i+]/[?]	Info / Angle
1	1	Netflix	Shift + Red / Netflix /
2	2	Help	Sleep / Timer
3	3	TV	Shift + 1
4	4	Action Menu	D.Menu / Top
5	5	Up	Up
6	6	Guide	Guide / EPG / -/--
7	7	Left	Left
8	8	OK	OK
9	9	Right	Right
Exit	Exit / Cancel / Clear	Back	Back / Return
0	0	Down	Down





Original		Rechange		Original		Rechange	
	Home		Menu / Home		Rec		Rec / Rec Mode
	Discover		Fav / Marker / PC		Stop		Stop / Hold
	Vol+		Vol+		Title List		Smart / List
	O		Picture / Format				
	PR+		CH+ / Page+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	PR-		CH- / Page-				
	Audio		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	[+]		Zoom / Size				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I		>>I / Preset+				

