


 

 

 


 







 











 

 



 

 

 








Original	Recharge
 Power	 Power
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/ Select	 Ok
 Menu	 Menu
 [i] / I n f o	 I n f o
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 0	 0
 PP	 Pre Ch
 - / - -	 Shi ft + Gui de
 P<P	 Back
 CH-	 Ch -
 CH+	 Ch +
 Vol +	 Vol +
 Vol -	 Vol -
 Mut e	 Mut e
 I - I I	 Dual
 DTV/ TV	 TV/ R
 AV	 AV
 Red/ Sound/ ▲	 Red
 Green/ Pi ct ure/ ▼	 Green
 Yel l ow/ Feat ure	 Yel l ow
 Bl ue/ I nst al l	 Bl ue
 [≡] / Text	 Text



