







 

 
 
 

 
 
 

 
 




 



 

 

 

 

 


 


 

 



 
 
 
 


 



 

 





 

 


 

















Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Info		Info / Angle
	Angle		Shift + Info / Angle
	Copy		Picture / Format
	Zoom		Zoom / Size
	Tv Sys		Smart / List
	Music		Sound / Title
	Setup		Setup / OPT /
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sleep / Timer
	0		0
	Goto		Shift + Text /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	<</FR		<< / Tune-
	>>/FF		>> / Tune+
	A-B		Shift + Yellow / YouTube /
	Repeat		Shift + Green / APP /
	>>I/Next		>>I / Preset+
	Vol+		Vol+
	Play/Pause		Play / Slow
	Vol-		Vol-





Original	Recharge	Original	Recharge
 I<</Prev	 I<< / Preset-		
 Home	 D.Menu / Top		
 Up	 Up		
 X/Return	 Back / Return		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Select	 Fav / Marker / PC		
 Down	 Down		
 Wuaki TV	 Display / Media		
 Red	 Red / Netflix / Search		
 Green/EPG	 Green / APP / Repeat		
 Green/EPG	 Guide / EPG / -/--		
 Yellow/TTX	 Yellow / YouTube / Repeat		
 Yellow/TTX	 Text / Goto		
 Blue	 Blue / Prime Video / Random		

Original	Recharge	Original	Recharge

