




 







 









 
 

 








 

 

 
 

 
 
 

 
 




 




 
 






Original	Rechange	Original	Rechange
 On/Standby	 Power	 Down	 Down
 Open/Close	 Eject	 Right	 Right
 CD	 Yellow	 Left	 Left
 Play	 Play	 Menu/Set	 Menu
 Tuner	 Green	 Mute	 Mute
 Aux	 Red	 Play/Pause iPod	 Blue
 Pause	 Pause	 Remote iPod	 3D
 Sleep	 Sleep	 Dimmer	 Media
 Stop/Band	 Stop	 Time/Display	 Info
 I<</Tuning-	 I<<	 Clock	 Shift + AV
 >>/Tuning+	 >>I	 Folder Mode	 TV/R
 << Search	 <<	 SDB/Tone	 Dual
 >> Search	 >>	 1	 1
 Vol+	 Vol +	 2	 2
 Vol-	 Vol -	 3	 3
 Enter/Memo	 Ok	 4	 4
 Up	 Up	 5	 5





	Original	Rechange	Original	Rechange
6	6			
7	7			
8	8			
9	9			
0/10	0/10			
+10	+10			
PROG / DIR	Prog/Dir			
RANDOM	Random			
REP 1 / ALL	Rep 1/All			
CLEAR	Clear			
CALL	Call			
PTY	PTY			
DAB / XM / RDS	DAB/XM/RDS			
I<< iPod	I<< iPod			
>>I iPod	>>I iPod			
P.LIST DOWN iPod	P.List Down iPod			
P.LIST UP iPod	P.List Up iPod			

