
































 






 



 






 



 



 





















 



 

 

 

 

 

 







Original	Rechange	Original	Rechange
 Power	 Power	 Mute	 Mute / Dimmer
 Tv/AV	 AV / Input / RDS	 Vol-	 Vol-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Vol+	 Vol+
 Eject	 Eject / Surround	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Sys Menu	 D.Menu / Top
 Play/Pause	 Play / Slow	 CH-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 Display	 Display / Media
 9	 9	 Picture	 Picture / Format
 Stop	 Stop / Hold	 Sound	 Sound / Title
 0	 0	 Timer	 Sleep / Timer
 -/--	 Shift + Guide / EPG / -/--	 Nicam/A2	 Audio / Lang I/II
 Return	 Back / Return	 Lan/Prog-	 Shift + CH- / Page-

Original	Rechange	Original	Rechange
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 Up	 Up	 CH+	 CH+ / Page+
 Vol+	 Vol+	 Left	 Left
 OK	 OK	 Right	 Right
 Sys Menu	 D.Menu / Top	 CH-	 CH- / Page-
 Down	 Down	 Display	 Display / Media
 Picture	 Picture / Format	 Sound	 Sound / Title
 Timer	 Sleep / Timer	 Nicam/A2	 Audio / Lang I/II
 Lan/Prog-	 Shift + CH- / Page-		





	Original		Recharge	
	Zoom/Prog+		Shift + CH+ /	
	Sub		Subtitle / EQ	
	Goto		Text / Goto	
	SET/Tv/TXT/DVB-		Setup / OPT /	
	Menu/Cancel/Tv Format		Menu / Home	
	ANG/Reveal/Exit		Exit / Cancel / Clear	
	Title/info		Shift + Sound / Title	
	<</Hold/Languag		<< / Tune-	
	>>/Size/Text		>> / Tune+	
	I<</Subpage		I<< / Preset-	
	FAV		Fav / Marker / PC	
	>>I/Index		>>I / Preset+	
	EPG		Guide / EPG / -/--	
	Red/Pro		Red / Netflix / Search	
	Tv/Radio		TV/Radio /	
	Green/Slow/Audio		Green / APP / Repeat	
	Yellow/Rep/Freeze		Yellow / YouTube / Repeat	

	Original		Recharge
	Blue/A-B/Subtitle		Blue / Prime Video / Random

