



Original	Recharge
TV Power	Power
NET	Display / Media
[i+]	Info / Angle
P.Info	Shift + Info / Angle
ATV	Shift + Setup / OPT / Tools
DTV	Setup / OPT /
SAT	Shift + 0
Radio	TV/Radio /
Power Source	Shift + Power
<<<	<<< / Tune-
Play	Play / Slow
>>>	>>> / Tune+
Control	Smart / List
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
Stop	Stop / Hold
Ready	Eject / Surround

Original	Recharge
←	I<<< / Preset-
	Pause / Step / Freeze
→	>>>I / Preset+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
S	Fav / Marker / PC
0	0
Source	AV / Input / RDS
I/II/I+II	Audio / Lang I/II
[<I>]	Zoom / Size



