









 



 





Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Hold		Stop / Hold
	♪		Sound / Title
	Sub		Subtitle / EQ
	16:9		Picture / Format
	TV/TX		TV/Radio /
	Double		D.Menu / Top
	[]		Setup / OPT /
	Mix		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Swap		Back / Return
	Vol+		Vol+
	PP		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0





Original	Recharge	Original	Recharge
 Violet	 Fav / Marker / PC		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow/Timer	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Update	 Shift + OK		
 Reveal	 Shift + Back / Return		
 P100	 Shift + 0		

Original	Recharge

