



Original	Recharge
Sleep	Sleep / Timer
Clock/Timer	Shift + Sleep / Timer
Clock/Timer Set	TV/Radio /
Power	Power
Function	D.Menu / Top
Tuner Memory	6
Display	Display / Media
Tape	5
<> Tape	Shift + 5
Stop Tape	Shift + Stop /
Tuner/Band	Shift + 6
Tuner/Band	CH- / Page-
Tuner/Band	CH+ / Page+
CD	3
Play CD	Shift + Play /
Pause CD	Pause / Step / Freeze
Stop CD	Stop / Hold

Original	Recharge
Clear	Exit / Cancel / Clear
Play Mode	Play / Slow
Repeat	Green / APP / Repeat
Enter	OK
I<<	I<< / Preset-
Vol+	Vol+
>>I	>>I / Preset+
EQ-	Shift + Vol-
EQ	Subtitle / EQ
EQ+	Shift + Vol+
Vol-	Vol-
<<	<< / Tune-
>>	>> / Tune+

