













 
 
 



 
 
 

 
 
 

 


 

 
 
 
 


 


 
 
 

 
 


 
 


 
 


 
 


 
 






Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	CD1		Red		Fade Muting		Mute
	CD2		Green		<</><<		<<
	CD3		Yellow		>>/>>		>>
	1		1		Play CD		Play
	2		2		Pause CD		Pause
	3		3		Stop		Stop
	4		4		AUX		AV
	5		5		<> Tape		Format
	6		6		Rec Pause		Rec
	7		7		Tape A		Smart
	8		8		Tape B		Media
	9		9		Sound Mode		Dual
	10		0		Active Bass EX		Subt
	10+		Guide		Sleep		Sleep
	FM Mode		TV/R		FM/AM		Options
	Vol+		Vol +				

