



 

 


 


 







 






| Original | Recharge |
|---|---|
|  Power |  Power |
|  Rec |  Rec / Rec Mode |
|  Red |  Red / Netflix / Search |
|  I<< |  I<< / Preset- |
|  Green/[] |  Green / APP / Repeat |
|  Stop |  Stop / Hold |
|  Yellow |  Yellow / YouTube / Repeat |
|  Play/[≡] |  Play / Slow |
|  Blue/[■] |  Blue / Prime Video / Random |
|  >>I |  >>I / Preset+ |
|  AV/[?] |  AV / Input / RDS |
|  I-II/[≡≡] |  Audio / Lang I/II |
|  [<>]/[+] |  Picture / Format |
|  [-S-] |  Zoom / Size |
|  Menu |  Menu / Home |
|  [≡] |  Text / Goto |
|  Pause |  Pause / Step / Freeze |

| Original | Recharge |
|---|--|
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Smart ♪ |  Sound / Title |
|  P- |  CH- / Page- |
|  Smart [] |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |










| Original | | Rechange | | Original | | Rechange | |
|----------|------|---------------------|-------------------|----------|--|----------|--|
| 6 | 6 | TUNER 6 | 6 | | | | |
| 7 | 7 | AUX - HDD 7 | 7 | | | | |
| 8 | 8 | USB 8 | 8 | | | | |
| 9 | 9 | BLUETOOTH 9 | 9 | | | | |
| [i+] | [i+] | ANGLE INFO | Info / Angle | | | | |
| 0 | 0 | HDMI - BAT 0 | 0 | | | | |
| P<P | P<P | PC FAV MARKER | Fav / Marker / PC | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |





| Original | Recharge |
|---|---|
|  0 |  Eject / Surround |
|  -0- |  Subtitle / EQ |
|  Power |  Power |
|  Rec |  Rec / Rec Mode |
|  I<< |  I<< / Preset- |
|  Red |  Red / Netflix / Search |
|  Green/[[]] |  Green / APP / Repeat |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Yellow / List |  Yellow / YouTube / Repeat |
| >>I button" data-bbox="235 645 265 665"/> >>I |  >>I / Preset+ |
|  AV/[?] |  AV / Input / RDS |
|  I-II/[≡≡] |  Audio / Lang I/II |
|  [<>]/[+] |  Zoom / Size |
|  PIP [■] |  Picture / Format |
|  Menu |  Menu / Home |
|  Pause |  Pause / Step / Freeze |

| Original | Recharge |
|---|---|
|  [≡] |  Text / Goto |
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Smart J |  Sound / Title |
|  P- |  CH- / Page- |
|  Smart [] |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |



 
 



 
 







 



 


| Original | | Rechange | | Original | | Rechange | |
|----------|------|------------------|-------------------|----------|--|----------|--|
| 5 | 5 | TAPE 5 | 5 | | | | |
| 6 | 6 | TUNER 6 | 6 | | | | |
| 7 | 7 | AUX - HDD 7 | 7 | | | | |
| 8 | 8 | USB 8 | 8 | | | | |
| 9 | 9 | BLUETOOTH 9 | 9 | | | | |
| [i+] | [i+] | ANGLE INFO | Info / Angle | | | | |
| 0 | 0 | HDMI - SAT 0 | 0 | | | | |
| P/P | P<P | PC FAV MARKER | Fav / Marker / PC | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |





| Original | Rechange |
|--|---|
|  Power |  Power |
|  -0- |  Subtitle / EQ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  AV/[?] |  AV / Input / RDS |
|  I-II/[≡ ≡] |  Audio / Lang I/II |
|  [<>]/[+] |  Zoom / Size |
|  Pause |  Pause / Step / Freeze |
|  [≡] |  Text / Goto |
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |

| Original | Rechange |
|---|---|
|  Vol- |  Vol- |
|  Smart J |  Sound / Title |
|  P- |  CH- / Page- |
|  Smart [] |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  P<P |  Fav / Marker / PC |

