 




Original	Recharge	Original	Recharge
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Red	 Red
 Recall	 Back	 Green	 Green
 Game	 Media	 Yellow	 Yellow
 Auto	 Smart	 Blue	 Blue
 Info	 Info	 Zoom	 Eject





Original		Rechange		Original		Rechange	
	Lan/Audio		Dual				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Text		Text				
	Tv/Radio		TV/R				
	Subtitle		Subt				

