

 

 


 

 
 
 


 

 




 




 
 
 
















 
 



 



 







 

 
 
 


 









Original		Recharge		Original		Recharge	
	Power		Power		F1		Shift + 1
	Mute		Mute		FUNC		3D
	Display		Info		Sub		Subt
	Mode		List		[++]		Format
	Timer		AV		TXT		Text
	TV/R		TV/R		Find		Shift + TV/R
	1		1		EPG		Guide
	2		2		Pause		Shift + Pause
	3		3		Sleep		Sleep
	4		4		Red/Audio		Red
	5		5		Green/Recall		Green
	6		6		Yellow/Zoom		Yellow
	7		7		Blue/Info		Blue
	8		8		FAV		Pre Ch
	9		9		Help		Dual
	0		0		Menu		Menu
	SAT		D. Menu		Exit		Exit





Original		Rechange		Original		Rechange	
	Up		Up		Stop		Stop
	Down		Down		Rec		Rec
	Right		Right		F2		Shift + 2
	Left		Left		F3		Shift + 3
	OK		Ok		F4		Shift + 4
	Back		Back		F5		Shift + 5
	USB		Media				
	Vol+		Vol +				
	Vol-		Vol -				
	Page+		Ch +				
	Page-		Ch -				
	<<		<<				
	>>		>>				
	l<<		l<<				
	>>l		>>l				
	Play		Play				
	Pause		Pause				

