



Original	Recharge
Power	Power
Power Tv	Shift + Power
Eject/Open-Close	Eject / Surround
AV Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/TRK+	Shift + CH+ /
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/TRK-	Shift + CH- /
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Recharge
Vol+ Tv	Vol+
Tv/VCR	TV/Radio /
0	0
AV	AV / Input / RDS
Vol- Tv	Vol-
<</Backward	<< / Tune-
>>/Forward	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display/CLK/CN	Display / Media
Up	Up
i/Setup	Info / Angle
Left	Left
OK/Enter	OK





Original	Recharge
	Right
	Disc Menu / D.Menu / Top
	Down
	Return / Back / Return
	Audio / Lang I/II
	Subtitle / EQ
	Camera/Angle / Shift + Info / Angle
	Zoom / Size
	Rec / Rec Mode
	Lock / Shift + Exit / Cancel / Clear
	Title / Sound / Title
	Program / Shift + TV/Radio / Program
	Marker / Fav / Marker / PC
	Search / Red / Netflix / Search
	Clear / Exit / Cancel / Clear
	Repeat / Green / APP / Repeat
	A-B/LP / Yellow / YouTube / Repeat

Original	Recharge
	Random/CM / Smart / List





Original	Recharge
Power	Power
Power Tv	Shift + Power
Eject/Open-Close	Eject / Surround
AV Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/TRK+	Shift + CH+ /
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/TRK-	Shift + CH- /
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Recharge
Vol+ Tv	Vol+
Tv7VCR	TV/Radio /
0	0
AV	AV / Input / RDS
Vol- Tv	Vol-
<</Backward	<< / Tune-
>>/Forward	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display/CLK/CN	Display / Media
Up	Up
i/Setup	Info / Angle
Left	Left
K/Enter	OK



