 






 
 

 
 
 
 

 

 


 
 


 
 


 

 
 
 
 
 
 
 
 

 
 
 


 
 

 
 
 

 







 
 
 

 


 

 





 



 

 




 
 



 
 
 

 
 
 






Original		Rechange		Original		Rechange	
	Standby		Power		Zoom		Shift + Eject
	Open/Close		Eject		OO/Audio		Dual
	Input Select		AV		Search		TV/R
	1		1		Repeat		Text
	2		2		Top Menu		Menu
	3		3		Disc Menu		D. Menu
	4		4		Enter		Ok
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Return		Back
	0		0		Display		Info
	Prog+		Ch +		Instant Skip		Guide
	Prog-		Ch -		1.3x/0.8x Play		Subt
	Clear		Exit		Time Slip		Sleep
	Mode		Format		Play		Play





	Original	Recharge		Original	Recharge
	Stop	 Stop			
	Pause	 Pause			
	<<	 <<			
	>>	 >>			
	>>	 >>			
	<<	 <<			
	Rec	 Rec			
	DVD	 Green			
	VCR	 Red			
	Dubbing	 Blue			
	Sat Link	 Media			
	Timer Set	 3D			
	Timer Prog.	 List			
	Rec Mode	 +  Shift + Rec			
	Setup	 Options			

