



Original	Rechange
Power	Power
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute
SDB Tone	Smart
Play	Play
Pause	Pause
Stop	Stop
I<<	I<<
>>I	>>I
<</Tune-	<<
>>/Tune+	>>
Analog In	Red
Tuner	Green
CD	Yellow

Original	Rechange
Digital In	Blue
iPod/USB	Media
Enter	Ok
Up	Up
Down	Down
Right	Right
Left	Left
Folder Mode	Back
Setup	Options
Remote/Browse	Pre Ch
Repeat	Text
Info	Info
DAB/RDS	TV/R
Program	D. Menu
Random	Subt
Clear	Exit
1	1





Original		Rechange		Original		Rechange	
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
+10	+10	GUIDE	Guide				
DIMMER	Dimmer	SOUND DUAL	Dual				
CLOCK	Clock	TIMER AV	AV				
SLEEP	Sleep	PROG SLEEP	Sleep				

