



Original	Recharge	Original	Recharge
Power Xbox	Power	Up	Up
Power Tv	SHIFT + Shift + Power	Down	Down
World	MEDIA	Right	Right
Yellow/Y	Yellow	Left	Left
Blue/X	Blue	Guide	Guide
Green/A	Green	Back	Back
Red/B	Red	Vol+	Vol +
Play	Play	Vol-	Vol -
Pause	Pause	CH/PG+	Ch +
>>	>>	CH/PG-	Ch -
<<	<<	Mute	Mute
I<	I<<	Last	Pre Ch
>I	>>I	Line Tv	TV/R
Menu	Menu	Input	AV
Info	Info	Disp	List
Rec	Rec	1	1
OK	Ok	2	2



