



 
 

 
 
 
 
 


 

 

 

 
 



 

 
 

 
 


 

 









	Original	Rechange		Original	Rechange
	Power		Power		8
	Mute		Mute		9
	Audio		Dual		0
	N/P		Format		10+
	Subtitle		Subt		Setup
	Zoom		Eject		Up
	Angle		Back		Down
	Program		Sleep		Right
	Display		Info		Left
	Step		AV		Enter
	1		1		Repeat
	2		2		AB
	3		3		Menu
	4		4		PBC
	5		5		Stop
	6		6		<<
	7		7		>>





	Original	Rechange	Original	Rechange
	I<<	 I<<		
	>>I	 >>I		
	Play	 Play		
	Pause	 Pause		

