 


















 

 











 

 

 






 

 



 
 

 

 

















Original	Recharge
 Power	 Power
 Red	 Red / Netflix / Search
 TV/SAT	 TV/Radio /
 Green	 Green / APP / Repeat
 TV/♪	 Sound / Title
 Yellow	 Yellow / YouTube / Repeat
 Zoom	 Zoom / Size
 Blue	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 SubT	 Subtitle / EQ
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 M/P	 Smart / List
 Mute	 Mute / Dimmer

Original	Recharge
 Up/CH+	 Up
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down/CH-	 Down
 P+	 CH+ / Page+
 FAV	 Fav / Marker / PC
 P-	 CH- / Page-
 Recall	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Rechange	Original	Rechange
7	7		7
8	8		8
9	9		9
Info	Info		Info / Angle
0	0		0
Timer	Timer		Sleep / Timer

