




 







 









 



 

 

 





 



 







 







 












 


Original	Rechange
 Power	 Power
 Stereo/Mono	 Shift + Sound / Title
 Tv/Video	 TV/Radio /
 Memory	 Smart / List
 Muting	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Function	 Setup / OPT /
 4	 4
 5	 5
 6	 6
 Band	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Sound/Field	 Sound / Title

Original	Rechange
 0/10	 0
 +10	 Guide / EPG / -/-
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Tv CH-	 CH- / Page-
 Tv CH+	 CH+ / Page+
 Enter	 OK
 AMP Menu	 Menu / Home










 














Original	Rechange	Original	Rechange
 Power	 Power	 DVD Menu	 D.Menu / Top
 Muting	 Mute / Dimmer	 Function	 Setup / OPT /
 Play Mode	 Play / Slow	 AMP Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop	 Stop / Hold	 Angle	 Info / Angle
 <</Tuning-/<l	 << / Tune-	 Left	 Left
 Tuning+/Slow	 >> / Tune+	 Enter	 OK
 l<</Preset-	 l<< / Preset-	 Right	 Right
 >>l/Preset+	 >>l / Preset+	 Clear	 Exit / Cancel / Clear
 Sound Field	 Sound / Title	 Down	 Down
 Audio	 Audio / Lang I/II	 Return	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Open/Close	 Eject / Surround	 Memory	 Smart / List
 Band	 Picture / Format	 Vol-	 Vol-
 Name	 Zoom / Size	 Display	 Display / Media
 Time	 Sleep / Timer	 1	 1
 Tv/Video	 TV/Radio /	 2	 2





	Original	Rechange		Original	Rechange
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	+10		Guide / EPG / -/--		
	0/10		0		
	Repeat		Green / APP / Repeat		
	Dimmer		Shift + Mute / Dimmer		
	Play/Select		Shift + Play /		
	Title		Shift + Sound / Title		
	Stereo/Mono		Shift + Audio / Lang I/II		
	Enter		Shift + OK		
	DVD Display		Shift + 2		
	DVD Setup		Shift + 3		

	Original	Rechange		Original	Rechange

