
















 

 
 



 



 




Original	Recharge
 Power	 Power
 SD/HC	 Shift + Display / Media
 Input TV	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Aspect	 Picture / Format
 Menu	 Menu / Home
 N	 Shift + Up
 Direct Tv Rec	 D.Menu / Top
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 Smart / List
 Viera Link	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [≡♦]/Sttl	 Subtitle / EQ
 [≡i]/Index	 Shift + Info / Angle
 [≡+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Recharge		Original		Recharge	
	7		7		Pause/Step		Pause / Step / Freeze
	8		8		Rec		Rec / Rec Mode
	9		9				
	Mute		Mute / Dimmer				
	0		0				
	OIO		Shift + Smart / List				
	Vol+		Vol+				
	CH+		CH+ / Page+				
	Vol-		Vol-				
	CH-		CH- / Page-				
	Power Down		Shift + Power				
	Programme		Shift + CH- /				
	Programme Up		Shift + CH+ /				
	<< / Tune-		<< / Tune-				
	Play		Play / Slow				
	>> / Tune+		>> / Tune+				
	Stop		Stop / Hold				

