


 


 
 
 





 





 
 



 
 
 



 



 

 

 


 



 


 


 
 

 



 


 
 
 







Original		Rechange		Original		Rechange	
	Power		Power		Yellow		Yellow
	Play		Play		Index		List
	Pause		Pause		Blue		Blue
	<<		<<		CH+		Ch +
	>>		>>		CH-		Ch -
	I<<		I<<		Input		AV
	>>I		>>I		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	Rec		Rec		Mute		Mute
	Tv/TXT		Text		Menu		Menu
	Cancel		Shift + Exit		Exit		Exit
	Hold		Options		DVB		Smart
	Reveal		D. Menu		Up		Up
	Size		3D		Down		Down
	Red		Red		Right		Right
	Green		Green		Left		Left
	Subpage		Eject		OK		Ok





	Original	Recharge		Original	Recharge
	1		1		FAV
	2		2		FAV+
	3		3		FAV-
	4		4		Subtitle
	5		5		Pic Format
	6		6		Language
	7		7		Text
	8		8		EPG
	9		9		Display
	0		0		
	-/	 + 	Shift + Guide		
	Recall	 + 	Back		
	Picture	 +  + 	Shift + Format		
	Sound	 +  + 	Shift + Dual		
	Nicam/A2	 + 	Media		
	Sleep	 + 	Sleep		
	Tv/Radio	 + 	TV/R		

