 




 
 







 





 


 

 

 











Original		Rechange		Original		Rechange	
	Power		Power		Prog		TV/Radio /
	Open/Close		Eject / Surround		Setup		Setup / OPT /
	1		1		Up		Up
	2		2		DVD/USB		AV / Input / RDS
	3		3		DVD/USB		Shift + 2
	Subtitle		Subtitle / EQ		DVD/USB		Shift + 8
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	Language		Audio / Lang I/II		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		<</Rev		<< / Tune-
	OSD		Display / Media		Stop		Stop / Hold
	0/10		0		Play		Play / Slow
	10+		Guide / EPG / -/--		Pause		Pause / Step / Freeze
	Clear		Exit / Cancel / Clear		I<</Prev		I<< / Preset-





Original		Rechange		Original		Rechange	
	Search		Red / Netflix / Search		Remain		D.Menu / Top
	Repeat		Green / APP / Repeat				
	>>/Fwd		>> / Tune+				
	>>I/Next		>>I / Preset+				
	Vol-		Vol-				
	Vol+		Vol+				
	Title		Sound / Title				
	Return		Back / Return				
	V-Mode		Picture / Format				
	Slow		Shift + Play /				
	A-B		Yellow / YouTube / Repeat				
	RAN		Text / Goto				
	N/P		CH+ / Page+				
	L/R		CH- / Page-				
	Angle		Info / Angle				
	Zoom		Zoom / Size				
	Resume		Smart / List				

