







 
 



Original	Rechange	Original	Rechange
Power	Power	Menu	Menu
Mute	Mute	EPG	Guide
1	1	Exit	Exit
2	2	Up / CH + / I<<	Up
3	3	Down / CH - / >>I	Down
4	4	Right / Vol +	Right
5	5	Left / Vol -	Left
6	6	OK	Ok
7	7	Up / CH + / I<<	I<<
8	8	Down / CH - / >>I	>>I
9	9	Up / CH + / I<<	Ch +
0	0	Down / CH - / >>I	Ch -
FAV	SHIFT +  FAV Shift + Pre Ch	Left / Vol -	Vol -
Recall	FAV +  PRE-CH Pre Ch	Right / Vol +	Vol +
Game	APP Media	ZOOM Red / Zoom	Red
Auto	HOME Smart	LAN/AUDIO Green / Lan/Audio	Green
Info	DISPLAY Info	PLAY/PAUSE Yellow /	Yellow

Original	Rechange	Original	Rechange
Menu	Menu	Menu	Menu
EPG	Guide	Exit	Exit
Up / CH + / I<<	Up	Down / CH - / >>I	Down
Right / Vol +	Right	Left / Vol -	Left
OK	Ok	Up / CH + / I<<	I<<
Down / CH - / >>I	>>I	Up / CH + / I<<	Ch +
Left / Vol -	Vol -	Down / CH - / >>I	Ch -
Right / Vol +	Vol +	Left / Vol -	Vol -
Red / Zoom	Red	Right / Vol +	Vol +
Green / Lan/Audio	Green	ZOOM Red / Zoom	Red
Yellow /	Yellow	LAN/AUDIO Green / Lan/Audio	Green
		PLAY/PAUSE Yellow /	Yellow



Play/Pause



	Original	Recharge	Original	Recharge
	 Blue / Text	 Blue		
	 Red / Zoom	 Eject		
	 Green / Lan/Audio	 Dual		
	 Yellow /	 Play		
	 Yellow /	 Pause		
	 Blue / Text	 Text		
	 << / Tv/Radio	 <<		
	 << / Tv/Radio	 TV/R		
	 >> / Subtitle	 >>		
	 >> / Subtitle	 Subt		

