
 



 

 
 




 

 




| Original   | Rechange  | Original  | Rechange   |
|--|---|---|--|
|  Power    |  Power             |  Menu                |  Menu     |
|  Mute     |  Mute              |  EPG                 |  Guide    |
|  1        |  1                 |  Exit                |  Exit     |
|  2        |  2                 |  Up / CH + / I<<     |  Up       |
|  3        |  3                 |  Down / CH - / >>I   |  Down     |
|  4        |  4                 |  Right / Vol +       |  Right    |
|  5        |  5                 |  Left / Vol -        |  Left     |
|  6        |  6                 |  OK                  |  Ok       |
|  7        |  7                 |  Up / CH + / I<<     |  I<<      |
|  8        |  8                |  Down / CH - / >>I   |  >>I      |
|  9      |  9               |  Up / CH + / I<<   |  Ch +   |
|  0      |  0               |  Down / CH - / >>I |  Ch -   |
|  FAV    |  Shift + Pre Ch |  Left / Vol -      |  Vol -  |
|  Recall |  Pre Ch         |  Right / Vol +     |  Vol +  |
|  Game   |  Media          |  Red / Zoom        |  Red    |
|  Auto   |  Smart          |  Green / Lan/Audio |  Green  |
|  Info   |  Info           |  Yellow /          |  Yellow |

| Original   | Rechange   | Original  | Rechange  |
|--|--|---|---|
|  MUTE     |  MUTE     |  TV              |  DVD             |
|  MUTE     |  MUTE     |  SAT             |  AUX             |
|  1        |  1        |  PLAY MODE       |  REC MODE        |
|  2        |  2        |  Play            |  Pause           |
|  3        |  3        |  Stop            |  Red             |
|  4        |  4        |  Fast Backward   |  Fast Forward    |
|  5        |  5        |  SOUND           |  AD              |
|  6        |  6        |  SETTINGS        |  OPT             |
|  7        |  7        |  LIST            |  DUAL            |
|  8        |  8        |  SUBT            |  ECO             |
|  9        |  9        |  PROG            |  PICTURE         |
|  0        |  0       |  SLEEP           |  3D              |
|  FAV     |  FAV    |  E-MANUAL       |  TIMER          |
|  Recall |  Recall |  REPEAT        |  TEXT          |
|  GAME   |  GAME   |  ZOOM          |  AV            |
|  AUTO   |  AUTO   |  D.MENU        |  D.MENU        |
|  INFO   |  INFO   |  TOP MENU      |  DISPLAY       |
|  POWER  |  POWER  |  MENU          |  INFO          |
|  MUTE   |  MUTE   |  OK            |  OK            |
|  1      |  1      |  CLEAR         |  RETURN        |
|  2      |  2      |  EXIT          |  BACK          |
|  3      |  3      |  HOME          |  HOME          |
|  4      |  4      |  SMART         |  SMART         |
|  5      |  5      |  APP           |  APP           |
|  6      |  6      |  MEDIA         |  MEDIA         |
|  7      |  7      |  VOL +         |  VOL +         |
|  8      |  8      |  CH +          |  CH +          |
|  9      |  9      |  CH -          |  CH -          |
|  0      |  0      |  VOL -         |  VOL -         |
|  FAV    |  FAV    |  Right / Vol + |  Right / Vol + |
|  Recall |  Recall |  ZOOM          |  ZOOM          |
|  GAME   |  GAME   |  LAN/AUDIO     |  LAN/AUDIO     |
|  AUTO   |  AUTO   |  PLAY/PAUSE    |  PLAY/PAUSE    |
|  INFO   |  INFO   |  A             |  A             |
|  POWER  |  POWER  |  B             |  B             |
|  MUTE   |  MUTE   |  C             |  C             |
|  1      |  1      |  D             |  D             |
|  2      |  2      |  Mandis SHOP   |  Mandis SHOP   |
|  3      |  3      |  www.mandis.tv |  www.mandis.tv |



Play/Pause

