

 
 
 
 
 
 
 
 

 




 
 



 









Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 Last View	 Pre Ch
 AV Mode	 Shift + AV
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 EPG	 Guide
 [≡]	 Text
 End	 Exit
 Back	 Back
 Home	 Smart
 3D	 3D
 Netflix	 Media
 ▼/O)/I/II/I+II	 Dual
 [<>]	 Format
 APP	 Shift + Media
 Eco	 Shift + 3D
 [...]	 Subt
 [≡?]	 Options
 [≡o]	 List





Original	Recharge
[≡+]	Sleep
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
OK	Ok
Up	Up
Down	Down
Right	Right
Left	Left
Radio	TV/R
SAT	Eject
DTV	Shift + Pre Ch
ATV	Shift + Guide
P.Info	Shift + Info
[i+]	Info
Control	D. Menu

Original	Recharge
Power Ext	Shift + Power
Rec	Rec
Play	Play
<<	<<
>>	>>
Stop	Stop
<<	<<
>>	>>
Pause	Pause
Rec Stop	Shift + Stop
←	Shift + Left
→	Shift + Right

