

 

 











 




 
 





 

 

 

 

 








 

 




 






 
 
 
 




Original	Rechange
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV / Input	 AV
 << Scan	 <<
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I

Original	Rechange
 Pause / Step	 Pause
 Play	 Play
 Stop	 Stop
 Home	 Smart
 Menu / List	 Menu
 List	 List
 Up	 Up
 PR / CH+	 Ch +
 PR / CH-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Display	 Info
 Return	 Back
 O))) / Audio	 Dual
 [...] / Subtitle	 Subt





Original		Rechange	
	Zoom	 + 	Shift + Eject
	Setup	 OPT	Options
	Rec		Rec
	Rec Mode	 + 	Shift + Rec
	Thumbnail	 FORMAT	Format
	CHP.ADD	 TEXT	Text
	Play Mode	 + 	Shift + Play
	Clear	 EXIT	Exit
	Title	 GUIDE	Guide
	TV / DVD	 TV/R	TV/R
	Power TV	 + 	Shift + Power
	PR / CH+ TV	 + 	Shift + Ch +
	PR / CH- TV	 + 	Shift + Ch -
	Vol+ TV		Vol +
	Vol- TV		Vol -
	AV / Input TV	 + 	Shift + AV

Original	Rechange

