

 


 
 


 





 


 




	Original	Rechange	Original	Rechange
	Power			Vol +
	Dimmer			Vol -
	Clock			Mute
	Sleep			SDB Tone
	CD			Ch +
	Tuner			Ch -
	Bluetooth			Folder/All
	Optical In1			Info
	Optical In2			DAB/RDS
	Analog In			Setup
	I<<			Up
	Play			Down
	Pause			Right
	>>I			Left
	<</Tune-			Enter
	Stop			1
	>>/Tune+			2



