

 



 

 

 

 

 

 

 



 



 









 



 



 



 

 

 

 

















Original		Rechange		Original		Rechange	
	Power		Power		Option		Setup / OPT /
	Source		AV / Input / RDS		OK		OK
	1		1		Up		Up
	2		2		Down		Down
	3		3		PR+		CH+ / Page+
	4		4		Right/Zoom+		Right
	5		5		Left/Zoom-		Left
	6		6		PR-		CH- / Page-
	7		7		Info		Info / Angle
	8		8		Mute		Mute / Dimmer
	9		9		Vol+		Vol+
	0		0		Vol-		Vol-
	Guide		Guide / EPG / -/--		Text		Text / Goto
	Return		Back / Return		Subtitle		Subtitle / EQ
	Eco		D.Menu / Top		List		Smart / List
	Menu		Menu / Home		Red		Red / Netflix / Search
	Exit		Exit / Cancel / Clear		TV		Display / Media





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 O)Lang	 Audio / Lang I/II		
 Blue	 Blue / Prime Video / Random		

