 


 
 


 
 
 

 
 
 
 
 
 
 





 



 

 





	Original	Rechange		Original	Rechange
	Power		Power		
	TV		1		
	BD/DVD		2		
	YIT		3		
	Clear Voice		Guide		
	Uni Volume		0		
	Audio Delay		Pre Ch		
	Surround		Dual		
	Stereo		Subt		
	Subwoofer+		Ch +		
	Subwoofer-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	Tv Remote Control Learn		Options		
	Tv Remote Control Repeater		TV/R		

