



Original		Rechange		Original		Rechange	
	Power		Power		Eco		3D
	Sleep		Sleep		Vol+		Vol +
	CBL/SAT		1		Vol-		Vol -
	DVD		2		Mute		Mute
	Blu-ray		3		CH/Page+		Ch +
	Game		4		CH/Page-		Ch -
	AUX1		5		Info		Info
	Media Player		6		Option		Options
	TV/Audio		7		Back		Back
	AUX2		8		Setup		Menu
	Tuner		9		Up		Up
	iPod/USB		Guide		Down		Down
	CD		0		Right		Right
	Bluetooth		Pre Ch		Left		Left
	Online Music		Media		Enter		Ok
	Phono		Smart		I<</Tune-		I<<
	Internet/Radio		TV/R		Play		Play







Original		Rechange		Original		Rechange	
	Power		Power		CH/Page+		Ch +
	Sleep		Sleep		CH/Page-		Ch -
	CBL/SAT		1		Mute		Mute
	DVD		2		Vol+		Vol +
	Blu-ray		3		Vol-		Vol -
	Game		4		Up		Up
	AUX1		5		Down		Down
	Media Player		6		Right		Right
	TV/Audio		7		Left		Left
	AUX2		8		Enter		Ok
	Tuner		9		Back		Back
	iPod/USB		Guide		I<</Tune-		I<<
	CD		0		Play		Play
	Bluetooth		Pre Ch		Pause		Pause
	Online Music		Media		Tune+/>>I		>>I
	Phono		Smart		Smart Select 1		D. Menu
	Internet Radio		TV/R		Smart Select 2		Text



