


 





 


 
 
 
 

 



 


 


 
 
 

 
 

 

 
 
 

 
 


 




 

 



 
















Original	Recharge	Original	Recharge
 Power	 Power	 Prog/Check	 Sleep
 Select Drive	 Pre Ch	 I<< Skip	 I<<
 1	 1	 Skip >>I	 >>I
 2	 2	 << Slow/Search	 <<
 3	 3	 Slow/Search >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause/PAUSE Live	 Pause
 6	 6	 Play/x1.3	 Play
 7	 7	 i/Status	 Info
 8	 8	 Exit	 Exit
 9	 9	 Pop-Up Menu/Direct	 D. Menu
 0	 0	 Guide	 Guide
 Del	 List	 Function Menu	 Menu
 Input Select	 AV	 Up	 Up
 CH+	 Ch +	 Down	 Down
 CH-	 Ch -	 Right/II>	 Right
 Cast/Viera	 Smart	 <II/Left	 Left





Original	Recharge
OK	Ok
Option	Options
Return	Back
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
Rec Mode	Shift + Rec
Ext Link	Media
Direct Tv Rec	TV/R
[≡]/Text	Text
[≡◆]/STTL	Subt
Audio	Dual
Display	Shift + Info
Chapter	Format
Time Slip	Shift + Sleep

Original	Recharge
Manual Skip -10s	Shift + Left
Manual Skip +60s	Shift + Right
Power Tv	Shift + Power
AV Tv	Shift + AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
CH+ Tv	Shift + Ch +
CH- Tv	Shift + Ch -

