




















 


 













 







 

 























Original	Rechange	Original	Rechange
 Power	 Power	 [i+]/Info	 Info / Angle
 Tv/DTV	 TV/Radio /	 0	 0
 Input1	 Shift + 1	 P+	 CH+ / Page+
 Input2	 Shift + 2	 I-II	 Audio / Lang I/II
 Input3	 Shift + 3	 Vol+	 Vol+
 Input4	 Shift + 4	 P-	 CH- / Page-
 [> <]/[≡+]	 D.Menu / Top	 Mute	 Mute / Dimmer
 [<>]/[≡♦]	 Picture / Format	 Vol-	 Vol-
 1	 1	 Return	 Back / Return
 2	 2	 Up	 Up
 3	 3	 Home Menu	 Menu / Home
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 EPG	 Guide / EPG / -/-





	Original	Recharge	Original	Recharge
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	[...]	Subtitle / EQ		
	[≡?]	Display / Media		
	[≡i]	Smart / List		
	[≡]	Text / Goto		

