



 




 
 

 

 


 



 

 

 
 








 



 

 

 
 
 
 





	Original	Recharge	Original	Recharge
	Power			Info/[≡i]
	Mute			Vol+
	1			Vol-
	2			CH+
	3			CH-
	4			Menu
	5			Exit
	6			Recall
	7			Home
	8			≡
	9			Internet
	0			Up
	Back			Down
	Audio			Right
	Source			Left
	List			OK
	EPG			Radio/Audio+
				Info
				Vol +
				Vol -
				Ch +
				Ch -
				Menu
				Exit
				Pre Ch
				Shift + Smart
				Shift + Media
				Media
				Up
				Down
				Right
				Left
				Ok
				TV/R



