



Original	Rechange
	Power
	Vol+
	CH+ / Page+
	Vol-
	Mute / Dimmer
	Back / Return
	CH- / Page-
	Exit / Cancel / Clear
	Up
	Menu / Home
	Left
	OK
	Right
	Down
	Text / Goto
	Red / Netflix / Search
	Green / APP / Repeat

Original	Rechange
	Yellow / YouTube / Repeat
	Info / Angle
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	AV / Input / RDS
	Setup / OPT /
	<< / Tune-
	Play / Slow
	>> / Tune+











Original	Rechange	Original	Rechange
Power	Power	Yellow	Yellow / YouTube / Repeat
Vol+	Vol+	Info	Info / Angle
PR+	CH+ / Page+	Blue/[ ]	Blue / Prime Video / Random
Vol-	Vol-	1	1
Mute	Mute / Dimmer	2	2
Back	Back / Return	3	3
PR-	CH- / Page-	4	4
Exit	Exit / Cancel / Clear	5	5
Up	Up	6	6
Menu	Menu / Home	7	7
Left/Zoom-	Left	8	8
OK	OK	9	9
Right/Zoom+	Right	AV	AV / Input / RDS
Down	Down	0 / - / --	0
Text	Text / Goto	SP/LP	Setup / OPT /
Red/[o]	Red / Netflix / Search	<<	<< / Tune-
Green/Timer/List	Green / APP / Repeat	Play	Play / Slow



