


 
 
 


 


 
 


 
 


 
 
 

 
 
 

 
 
 


 
 

 
 


 
 
 


 

 
 







 











 




Original		Rechange		Original		Rechange	
	Standby/on		Power		9		9
	Open/Close		Eject		0		0
	CD		Red		Equalizer		Options
	USB		Green		P.Bass		TV/R
	Tuner		Yellow		Bass/Treble		Subt
	Audio In		Blue		Random		Media
	BT Audio		Dual		Clear		Exit
	Clock/Timer		AV		Repeat		Text
	Sleep		Sleep		Display		Info
	1		1		Folder		Back
	2		2		Menu		Menu
	3		3		Memory/Progra		D. Menu
	4		4		Up/Tune+		Up
	5		5		Down/Tune-		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok





	Original	Rechange	Original	Rechange
	Preset+	 Ch +		
	Preset-	 Ch -		
	Dimmer	 Format		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	>>I	 >>I		
	I<<	 I<<		
	>>	 >>		
	<<	 <<		
	Stop	 Stop		
	Pause	 Pause		
	Play	 Play		
	ST/Mono	 3D		
	RDS ASPM	 Guide		
	RDS PTY	 Pre Ch		
	RDS Display	 Smart		

