



 



 







 


 
 




 







 





 
 


 


 

 
 
 

 






 
 
 

 
 




 




 



 




Original		Rechange		Original		Rechange	
	Power		Power		>>		>>
	Open/Close		Eject		1		1
	DVD		Smart		2		2
	Display		Info		3		3
	Disc Menu		D. Menu		4		4
	Setup		Options		5		5
	Return		Back		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0
	Enter		Ok		Program		Sleep
	Title		List		Clear		Exit
	Pause / Step		Pause		O)) / Audio		Dual
	Stop		Stop		[...] / Subtitle		Subt
	Play		Play		Marker		3D
	I<<		I<<		Search		TV/R

 



 


 
 



 



 


 
 
 
 
 
 

 

 

 



 
 


 
 

 
 
 
 
 

 
 

 
 
 
 

 
 
 

 












	Original	Recharge		Original	Recharge
	Camera / Angle	 Red			
	Zoom	 +  Shift + Eject			
	Repeat	 Text			
	Random	 Yellow			
	A-B	 Green			


 




	Original	Rechange	Original	Rechange
	 Power	 Power	 >>	 >>
	 Eject	 Eject	 1	 1
	 Tv / VCR	 TV/R	 2	 2
	 VCR	 Smart	 3	 3
	 AV	 AV	 4	 4
	 CLK / CNT	 Info	 5	 5
	 [i]	 Media	 6	 6
	 Up	 Up	 7	 7
	 Down	 Down	 8	 8
	 Right	 Right	 9	 9
	 Left	 Left	 0	 0
	 OK	 Ok	 Clear	 Exit
	 Pause / Step	 Pause	 O)) / Audio	 Dual
	 Stop	 Stop	 Search	 Shift + TV/R
	 Rec / ITR	 Rec	 C.Lock	 Back
	 Play	 Play	 0Z Repeat	 Text
	 I<<	 I<<	 CM Skip	 Yellow





Original	Rechange
 A-B LP	 Red A

Original	Rechange

