 
 
 
 
 
 
 
 
 
 
 
 

 


 



 







 


 


 


 
 


 


 
 








 

 



 
 
 

 
 







 
 




Original		Rechange		Original		Rechange	
	Power		Power		I<<		I<<
	Eco		3D		Play		Play
	Quick Select 1		1		Pause		Pause
	Quick Select 2		2		>>I		>>I
	Quick Select 3		3		Mute		Mute
	Quick Select 4		4		CH+		Ch +
	Up		Up		CH-		Ch -
	Enter		Ok		Search		TV/R
	Down		Down		Restorer		Exit
	Right		Right		CH Level		Media
	Left		Left		Mode		Subt
	Vol+		Vol +		Tv Audio		Dual
	Vol-		Vol -		Bluetooth		Smart
	Back		Back		Memory		AV
	Setup		Menu		CBL/Sat		5
	Info		Info		DVD/Bluray		6
	Option		Options		FM		7





	Original	Recharge	Original	Recharge
	Blu-ray	 8		
	Game	 9		
	AM	 Guide		
	Media Player	 0		
	USB	 Pre Ch		
	Sound Mode >	 Green		
	< Sound Mode	 Red		
	Audio Delay+	 Blue		
	Audio Delay-	 Yellow		
	Tune+	 >>		
	Tune-	 <<		
	Sleep	 Sleep		

