



 







 






 




 


 





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 Audio	 Audio / Lang I/II
 O/Pop-Up-M	 Smart / List
 →[]←/Zoom	 Zoom / Size
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS

Original	Rechange
 EPG/Repeat	 Shift + Green / APP / REPEAT
 EPG/Repeat	 Guide / EPG / -/-
 Assist	 Display / Media
 PIP/[]	 Picture / Format
 Text/Disc-M	 D.Menu / Top
 Text/Disc-M	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 Vol+	 Vol+
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-



 





 













 






















 






 









Original	Recharge	Original	Recharge
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random
	Blue/Marker		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec/HDMI		Rec / Rec Mode
	Rec/HDMI		Shift + 0
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold





 





 













 













Original	Rechange
 Power	 Power
 O/Pop-Up-M	 Smart / List
 →[]←/Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS
 EPG/Repeat	 Shift + Green / APP / Repeat
 EPG/Repeat	 Guide / EPG / -/--
 Assist	 Display / Media

Original	Rechange
 PIP/[]	 Picture / Format
 Text/Disc-M	 D.Menu / Top
 Text/Disc-M	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Marker	 Blue / Prime Video / Random





Original	Rechange
 Power	 Power
 O/Pop-Up-M	 Smart / List
 →[]←/Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 AV / Input / RDS
 0/AV	 0
 EPG/Repeat	 Shift + Green / APP / Repeat
 EPG/Repeat	 Guide / EPG / -/--
 Assist	 Display / Media

Original	Rechange
 PIP/[]	 Picture / Format
 Text/Disc-M	 D.Menu / Top
 Text/Disc-M	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Marker	 Blue / Prime Video / Random





Original	Rechange
Blue/Marker	Fav / Marker / PC
<<<	<<< / Tune-
Play	Play / Slow
>>>	>>> / Tune+
Rec/HDMI	Shift + 0
Rec/HDMI	Rec / Rec Mode
Pause	Pause / Step / Freeze
Stop	Stop / Hold

Original	Rechange

