

 
 




 



 

 















 


 



 







Original	Recharge
 Speakers TV Audio Bravia Sync	 Shift + Sound / Title
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Fav / Marker / PC	 Fav / Marker / PC
 Text / Goto	 Text / Goto
 0	 0
 Enter	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+



 
 

 













 






 







 


Original		Recharge		Original	Recharge
	<</Tuning-		<< / Tune-		
	Play		Play / Slow		
	>>/Tuning+		>> / Tune+		
	[...]		Subtitle / EQ		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	Mute		Mute / Dimmer		
	Vol+		Vol+		
	Prog+		CH+ / Page+		
	Display		Display / Media		
	O)))		Audio / Lang I/II		
	Vol-		Vol-		
	Prog-		CH- / Page-		
	Sleep		Sleep / Timer		





 





 



 

 



























 














 



 







Original	Rechange
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ♥	 Fav / Marker / PC
 0	 0
 Enter	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options/Tools	 Setup / OPT /
 Function	 Info / Angle
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+





Original	Rechange
 Speakers TV Audio Bravia Sync	 Sound / Title
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Fav / Marker / PC	 Fav / Marker / PC
 Text / Goto	 Text / Goto
 0	 0
 Red / Netflix / Search	 Red / Netflix / Search
 Green / APP / Repeat	 Green / APP / Repeat

Original	Rechange
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Top Menu / D.Menu / Top	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return / Back / Return	 Back / Return
 Down	 Down
 Home / Menu / Menu / Home	 Menu / Home
 Subtitle / EQ	 Subtitle / EQ
 Mute / Dimmer	 Mute / Dimmer
 Vol+	 Vol+
 CH+ / Page+	 CH+ / Page+
 Display / Media	 Display / Media
 Vol-	 Vol-
 CH- / Page-	 CH- / Page-



