



 


 


























 


 





 











	Original	Rechange		Original	Rechange
	Power		Power		Pause
	Sleep		Sleep		Stop
	Tuner/Band		Green		I<<
	Auto/Mono		Pre Ch		>>I
	1		1		Program
	2		2		Cancel
	3		3		Deck 1/2
	4		4		> Deck 1/2
	5		5		< Deck 1/2
	6		6		Stop Deck 1/2
	7		7		<< Deck 1/2
	8		8		>> Deck 1/2
	9		9		Rec Pause
	0		0		Flat
	+10		Guide		EQ Space
	CD		Yellow		Balance R
	Play		Play		Balance L



