






 





 


 





 





 

 



 
 






 


 
 

 

 





	Original	Rechange	Original	Rechange
	Power			CH -
	HDMI1			Menu
	HDMI2			Up
	HDMI3			Down
	FM			Right
	Dock			Left
	Analog			Ok
	TV			Play
	Memory			Pause
	Info			>>I
	Tuning ▲			I<<
	Tuning ▼			Return
	Preset ▲			Subwoofer+
	Preset ▼			Subwoofer-
	Option			Vol+
	Setup			Vol-
	▲			Mute
				Mute



