

 
 


 

 


 
 
 

 




 


 

 
 
 



 





Original	Recharge
 Standby/On	 Power
 DVD/CD	 Red
 FM/AM Tuner	 Green
 Video/V1/V2/V3	 Smart
 MD Direct Play	 Yellow
 Tape Direct Play	 Blue
 System Vol+	 Vol +
 System Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 10/0	 0
>10 button" data-bbox="510 191 540 231"/> >10	 Guide
 1	 Shift + 1
 2	 Shift + 2
 3	 Shift + TV/R
 CLR	 Exit
 Test Tone	 Shift + Exit
 4	 Shift + Text
 5	 Shift + Play
 6	 Shift + 6
 7	 Eject
 8	 Sleep
 Top Menu	 Shift + Menu
 Set Up DVD	 Options
 System	 Media
 Sound	 Dual
 Return	 Back





Original		Rechange		Original		Rechange	
	Up		Up		Menu System		D. Menu
	Down		Down		Character DISP		Info
	Right		Right		Mute		Mute
	Left		Left		CH Level		Text
	Enter		Ok		Surround		List
	Play		Play		DSP		Pre Ch
	Pause		Pause		Audio		Shift + Dual
	Stop		Stop		Subtitle		Subt
	<</<I		<<		Angle		Format
	<I Step/Slow		Shift + Left		DVD Disp		3D
	>>/I>		>>		Power Tv		Shift + Power
	Step/Slow I>		Shift + Right		CH+ Tv		Shift + Ch +
	I<</Prev.		I<<		CH- Tv		Shift + Ch -
	I<< Folder/Group		Ch -		Vol+ Tv		Shift + Vol +
	>>/I>Next		>>I		Vol- Tv		Shift + Vol -
	Folder/Group >>I		Ch +		Input Tv		AV
	Menu		Menu		Clock/Timer Tv		TV/R

