



Original	Recharge	Original	Recharge
Input	AV / Input / RDS	Internet Video	Display / Media
Power	Power	Sync Menu	Shift + Menu /
Track ID	Zoom / Size	Guide	Guide / EPG / -/-
I<<	I<< / Preset-	Up	Up
Pause	Pause / Step / Freeze	[i+]/[?]	Info / Angle
>>I	>>I / Preset+	Return/Back	Back / Return
?/i-Manual	D.Menu / Top	Left	Left
<<	<< / Tune-	OK	OK
Play	Play / Slow	Right	Right
>>	>> / Tune+	Down	Down
3D	Shift + Display / Media	Options	Setup / OPT /
[+]	Picture / Format	Home	Menu / Home
Stop	Stop / Hold	Red	Red / Netflix / Search
Rec	Rec / Rec Mode	Green	Green / APP / Repeat
Digital/Analog	Shift + Smart / List	Yellow	Yellow / YouTube / Repeat
Exit	Exit / Cancel / Clear	Blue	Blue / Prime Video / Random
Scene	Smart / List	1	1





Original		Rechange		Original		Rechange	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	[≡]		Text / Goto				
	0		0				
	[...]		Subtitle / EQ				
	Mute		Mute / Dimmer				
	Vol+		Vol+				
	Prog/CH+		CH+ / Page+				
	Vol-		Vol-				
	Audio		Audio / Lang I/II				
	Prog/CH-		CH- / Page-				

