



Original	Recharge
Power Recorder	Shift + Power
Power Receiver	Power
HDD/DVD	Shift + 2
FM/AM	Shift + TV/Radio / Program
Audio In	Shift + Audio / Lang I/II
Sound Retriever	Shift + Sound / Title
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Rec	Rec / Rec Mode
Stop Rec	Shift + Stop /
Help	Text / Goto
Info	Info / Angle
Disc Navigator/Top	Smart / List
Home Menu	Shift + Menu /
Guide	Guide / EPG / -/--
Up/CH+	CH+ / Page+

Original	Recharge
Left/CM Back ←	Left
Enter	Shift + OK
Enter	OK
Right/CM Skip →	Right
Pause Line TV	Shift + Pause / Step /
Down/CH-	CH- / Page-
Return	Back / Return
I<</Prev	I<< / Preset-
>>I/Next	>>I / Preset+
Vol-	Vol-
Vol+	Vol+
Red	Red / Netflix / Search
Audio	Audio / Lang I/II
Green	Green / APP / Repeat
Subtitle	Subtitle / EQ
Yellow	Yellow / YouTube / Repeat
Angle	Shift + Info / Angle





Original	Recharge
PLAY MODE Blue	Blue / Prime Video / Random
PLAY MODE Play Mode	Shift + Play /
<</>	<< / Tune-
>>/>	>> / Tune+
TIMER REC Time Rec	Shift + Sleep / Timer
REC MODE Rec Mode	Shift + Rec / Rec Mode
SETUP 1	1
SETUP 1	Setup / OPT /
2	2
2 Up/Tune+	Up
3	3
3 SR+	Shift + Up
ONE TOUCH COPY One Touch	Shift + Display / Media
4	4
4 Left/ST-	Shift + Left
5	5
6	6

Original	Recharge
Right/ST+	Shift + Right
MENU	Menu / Home
7	7
MCACC 7	D.Menu / Top
8	8
8 Down/Tune-	Down
9	9
9 Test Tone	Shift + Text /
VIDEO IN	Shift + 4
Sleep	Sleep / Timer
Surround	Eject / Surround
0	0
0 Advanced	Picture / Format
Clear	Exit / Cancel / Clear
Sound	Sound / Title
Tv/DVD	Shift + 1
Power Tv Control	TV/Radio /





Original	Recharge
CH+ Tv Control	Shift + CH PAGE
Vol+ Tv Control	Shift + VOL
Jukebox	Shift + SMART
Input Tv Control	RDS AV INPUT
CH- Tv Control	Shift + CH PAGE
Vol- Tv Control	Shift + VOL
Display	MEDIA DISPLAY
RDS Disp	Shift + RDS AV INPUT

Original	Recharge

