 





 





 





















 

 








 


 









































Original	Recharge
 Standby/On	 Power
 Display	 Display / Media
 FM Mode	 Picture / Format
 A.Standby	 Shift + Power
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 Clock/Timer	 Shift + Sleep / Timer
 4	 4
 5	 5
 6	 6
 Set	 Menu / Home
 7	 7
 8	 8
 9	 9
 Cancel	 Exit / Cancel / Clear

Original	Recharge
 0	 0
 Over	 Info / Angle
 Play/Pause CD	 Play / Slow
 <>Tape	 Pause / Step / Freeze
 FM/AM	 Smart / List
 AUX	 Shift + 7
 Random	 Blue / Prime Video / Random
 Program	 TV/Radio /
 Repeat/RDS	 Green / APP / Repeat
 Remain/RDS	 Yellow / YouTube / Repeat
 Up	 Up
 Preset/Group	 CH+ / Page+
 Vol+	 Vol+
 I<<	 I<< / Preset-
 I<<	 Left
 Stop	 Stop / Hold
 Stop	 OK





Original	Rechange
 >>I	 >>I / Preset+
 >>I	 Right
 Vol-	 Vol-
 Down	 Down
 Preset/Group	 CH- / Page-
 Sound HBS	 Sound / Title
 Beat Cut	 Back / Return
 Rev Mode	 Setup / OPT /
 Fade Muting	 Mute / Dimmer

Original	Rechange

