







 



 

 

 






 












 

 

 



 







 











 

 





Original	Rechange	Original	Rechange
 Standby/On	 Power	 Text	 Text / Goto
 Mute	 Mute / Dimmer	 Input Select	 AV / Input / RDS
 Play	 Play / Slow	 Menu/Pop Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop	 Stop / Hold	 [i+]	 Info / Angle
 Rec	 Rec / Rec Mode	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >>	 >> / Tune+	 Right	 Right
 I<<	 I<< / Preset-	 Exit	 Exit / Cancel / Clear
 >>I	 >>I / Preset+	 Down	 Down
 Audio	 Audio / Lang I/II	 Return/Back	 Back / Return
 Subtitle	 Subtitle / EQ	 Prog+	 CH+ / Page+
 Open/Close	 Eject / Surround	 Display	 Display / Media
 Timeshift	 Sleep / Timer	 Prog-	 CH- / Page-
 Sat Link	 TV/Radio /	 1	 1
 Top Menu	 D.Menu / Top	 2	 2
 Setup	 Setup / OPT /	 3	 3





Original	Recharge
4	4
5	5
6	6
7	7
8	8
9	9
Guide	Guide / EPG / -/--
0	0
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec Mode	Shift + Rec / Rec Mode
→/V.Replay	Shift + >> / Preset+
AD	Shift + Audio / Lang I/II
Timer Prog	Shift + Sleep / Timer
Option	Shift + Setup / OPT / Tools

Original	Recharge
→/V.Skip	Shift + Right
Clear	Shift + Exit / Cancel / Clear
A1	Shift + 1
Disc	Shift + 3
HDD	Shift + 7

