









































 















 













Original		Rechange		Original		Rechange	
	Power		Power		PR+		CH+ / Page+
	AV Mode		AV / Input / RDS		Recall		Back / Return
	Radio		TV/Radio /		0		0
	Surround		Eject / Surround		Source		Shift + AV / Input / RDS
	DTV		Shift + TV/Radio / Program		PR-		CH- / Page-
	Mute		Mute / Dimmer		[<>]		Picture / Format
	1		1		I/II/I+II		Zoom / Size
	2		2		[i+]		Info / Angle
	3		3		Sleep		Sleep / Timer
	Vol+		Vol+		EPG		Guide / EPG / -/--
	4		4		ESG		Setup / OPT /
	5		5		DTV Menu		Shift + D.Menu / Top Menu
	6		6		[≡]/Text		Text / Goto
	Vol-		Vol-		Up		Up
	7		7		Menu		Menu / Home
	8		8		Left		Left
	9		9		OK		OK





Original	Recharge	Original	Recharge
			
			
			
			
			
			
			
			
			
			
			
			

