






















 

























 






Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 CH.List	 Smart / List
 P-	 CH- / Page-
 Media P.	 Display / Media
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





	Original	Recharge	Original	Recharge
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	E-Manual	D.Menu / Top		
	3D	Shift + 3		
	Sports	Sound / Title		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	I<<	I<< / Preset-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	>>I	>>I / Preset+		

