






 


 
 

 
 
 





 






Original	Rechange	Original	Rechange
 Power	 Power	 6	 6
 Mute	 Mute	 7	 7
 [<>]	 Format	 8	 8
 ♪	 Dual	 9	 9
 []	 3D	 0	 0
 PAT	 Smart	 Zoom	 Eject
 PIP Sel	 Play	 Swap	 Pre Ch
 PIP Pos	 Pause	 Swap	 Back
 PIP Size	 Stop	 PR-	 Ch -
 AV	 AV	 PR+	 Ch +
 PC	 Media	 Vol-	 Vol -
 TV	 TV/R	 Vol+	 Vol +
 1	 1	 Up	 Up
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 OK / Freeze	 Ok





Original	Rechange	Original	Rechange
 Info	 Info		
 Menu	 Menu		
 [+]	 Options		
 [?]	 D. Menu		
 [♦]	 Subt		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Text / Mix	 Text		
 [≡x]	 Exit		
 [≡≡]	 Guide		

