



Original		Recharge		Original		Recharge	
	Power		Power		FAV-		Shift + Ch -
	Mute		Mute		P.Mode		Media
	1		1		S.Mode		Options
	2		2		CH+		Ch +
	3		3		CH-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Input		AV
	7		7		Sleep		Sleep
	8		8		Aspect		3D
	9		9		Info		Info
	0		0		Menu		Menu
	-/--		Shift + Guide		Exit		Exit
	Recall		Back		Up		Up
	Audio		Dual		Down		Down
	FAV		Pre Ch		Right		Right
	FAV+		Shift + Ch +		Left		Left



